




INSTALLATION INTERFACE_2

INSTALLATION INTERFACE universal Porsche 911

Dismount the Porsche odoemeter. Connect the interface:

- Main justage (Skale (black switch)): has to show „1“
- Detail justage (Trimming (blue switch)): has to show „12 o Clock“

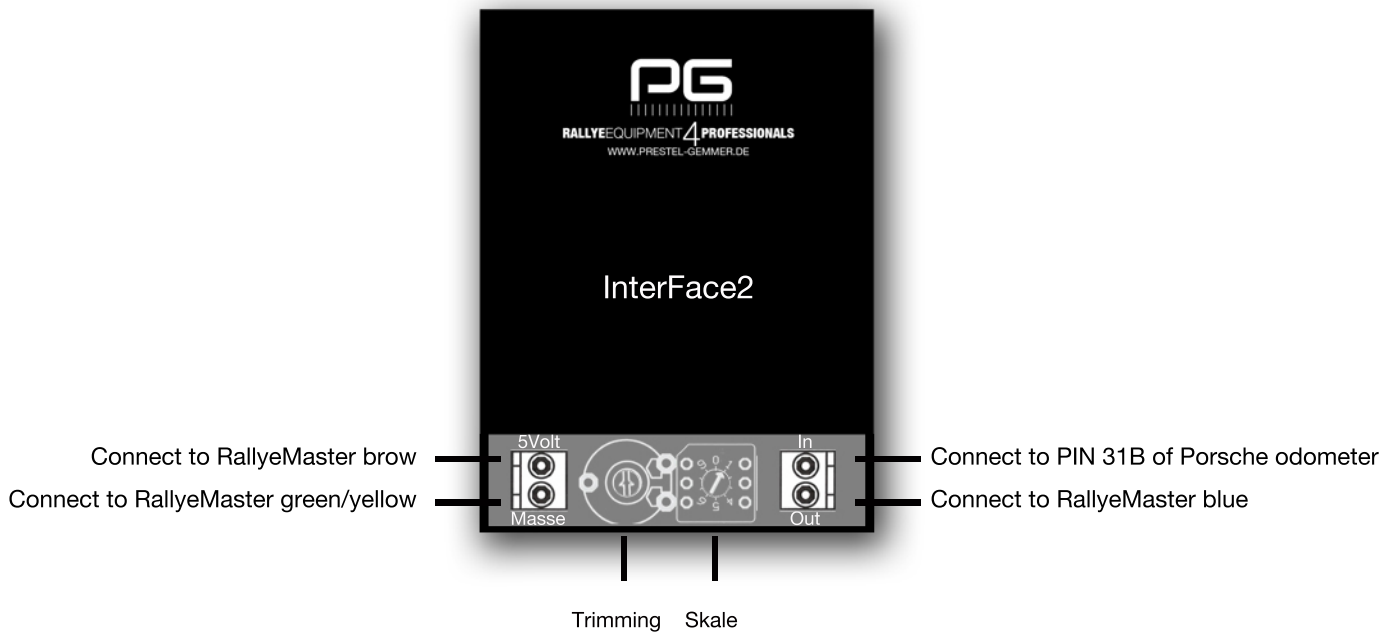

Trimming (Peak) (left): Leave in „1“. If you have problems with the peak (no signal, or running of RallyeMaster without moving the car), trimm the key during driving higher.

Skale (right): If your RallyeMaster runs too fast in trimm-Modus please select 2 or more until it runs in normal speed (justage to right side)

Mount the interface behind the odometer. Please check, that there is no connection to other parts!